
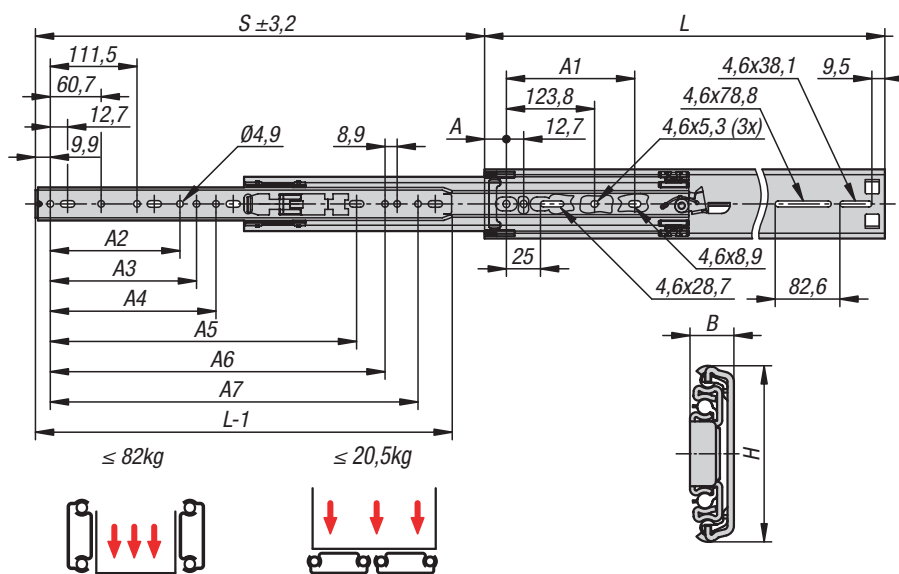


Bestellnummer	Montage	Produkttyp	Tragkraft pro Paar kg	Verpackungsart
21334-90-0406	Montage seitlich	Standard	71	1 Stück = 1 Paar
21334-90-0457	Montage seitlich	Standard	76	1 Stück = 1 Paar
21334-90-0508	Montage seitlich	Standard	80	1 Stück = 1 Paar
21334-90-0559	Montage seitlich	Standard	82	1 Stück = 1 Paar
21334-90-0610	Montage seitlich	Standard	81	1 Stück = 1 Paar
21334-90-0660	Montage seitlich	Standard	78	1 Stück = 1 Paar
21334-90-0711	Montage seitlich	Standard	73	1 Stück = 1 Paar
21334-90-0762	Montage seitlich	Standard	67	1 Stück = 1 Paar

Bestellnummer	A	A1	A2	A3	A4	A5	A6	A7	B	H	Hub S	L
21334-90-0406	16	153,7	-	-	-	-	162,6	336,5	12,7	51,6	457	406
21334-90-0457	16	178,8	-	-	164,8	-	-	387,3	12,7	51,6	508	457
21334-90-0508	16	203,8	-	172,1	203,2	-	-	438,1	12,7	51,6	559	508
21334-90-0559	16	228,8	-	-	213	-	407	488,9	12,7	51,6	610	559
21334-90-0610	16	253,8	254	273,7	-	-	457,8	539,7	12,7	51,6	660	610
21334-90-0660	16	278,7	140,3	232,4	269,1	-	508,6	590,5	12,7	51,6	711	660
21334-90-0711	16	303,8	191,1	283,2	304,8	526	559,4	641,4	12,7	51,6	762	711
21334-90-0762	16	328,8	-	241,9	319,9	527,1	610,2	692,1	12,7	51,6	813	762

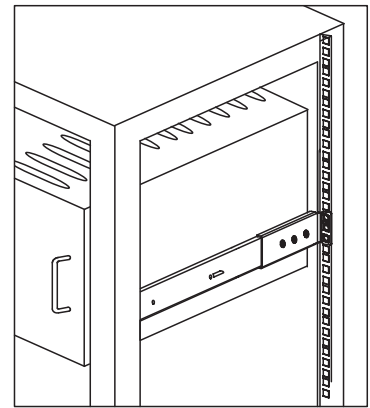

Order No.	Assembly	Product type	Loading per pair kg	Packaging type
21334-90-0406	side mounting	standard	71	1 piece = 1 pair
21334-90-0457	side mounting	standard	76	1 piece = 1 pair
21334-90-0508	side mounting	standard	80	1 piece = 1 pair
21334-90-0559	side mounting	standard	82	1 piece = 1 pair
21334-90-0610	side mounting	standard	81	1 piece = 1 pair
21334-90-0660	side mounting	standard	78	1 piece = 1 pair
21334-90-0711	side mounting	standard	73	1 piece = 1 pair
21334-90-0762	side mounting	standard	67	1 piece = 1 pair

Order No.	A	A1	A2	A3	A4	A5	A6	A7	B	H	Travel S	L
21334-90-0406	16	153,7	-	-	-	-	162,6	336,5	12,7	51,6	457	406
21334-90-0457	16	178,8	-	-	164,8	-	-	387,3	12,7	51,6	508	457
21334-90-0508	16	203,8	-	172,1	203,2	-	-	438,1	12,7	51,6	559	508
21334-90-0559	16	228,8	-	-	213	-	407	488,9	12,7	51,6	610	559
21334-90-0610	16	253,8	254	273,7	-	-	457,8	539,7	12,7	51,6	660	610
21334-90-0660	16	278,7	140,3	232,4	269,1	-	508,6	590,5	12,7	51,6	711	660
21334-90-0711	16	303,8	191,1	283,2	304,8	526	559,4	641,4	12,7	51,6	762	711
21334-90-0762	16	328,8	-	241,9	319,9	527,1	610,2	692,1	12,7	51,6	813	762

1. Slide chassis member (smallest) is removable. Separate slide members by pushing in the lock-in disconnect tab. Keep slide chassis member with original outer member.
2. Slide has front and rear adjustable EIA brackets. Attach front brackets to outer slide member using #8-32 machine screws by aligning access slots in intermediate member with threaded inserts in bracket. Front brackets can be mounted flush or 1/2" [12.7 mm] back from front of slide based on user needs.
3. Establish distance from front cabinet rail to rear cabinet rail and attach rear brackets to slide. Do not fully tighten rear bracket mounting screws until final adjustment is made.
4. Insert removable locator pin into center hole of brackets.
5. Slide will mount to various cabinet rails and at various locations on the chassis side. See illustrations at right.
6. Place slide into desired position and fully extend against EIA rails. Locator pins will support slide and bar nut while attaching screws.
7. Attach slide to EIA rail with #10-32 screws and fasten with bar nuts. Once screws are secure, remove locator pins. Do not fully tighten screws until final adjustment is made.
8. Mount slide chassis member (smallest) to the chassis.
9. With cabinet member in the open or closed position, bring ball retainer fully forward. Install chassis by engaging the slide members and close completely. Check slide alignment by opening and closing the chassis. Any sign of binding indicates lateral stress or misalignment.
10. Adjust slide position until movement is smooth. Tighten all screws and complete installation.

NOTE: To remove chassis, depress the lock-in/disconnect tab.

